
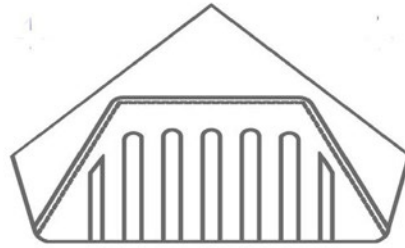


Surface and Corner Mount Soap Dish Holder

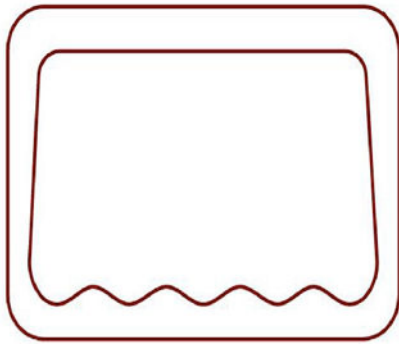

Before installing Soap Dish holder, the wall panel surrounds must be installed and seams sealed with 100% color matching silicone where the Soap Dish will be located.

Tools and Material Required

- 1) Hot melt glue and glue gun
- 2) 100% silicone
- 3) Torpedo level
- 4) Acetone
- 5) Pencil
- 6) Clean dry rags

Two types of adhesives are required for the installation of these Soap Dishes. The hot melt glue is for immediate bonding, however will not support the weight of the Soap Dish for more than a couple days. The silicone takes a few hours to cure, but once cured, the two adhesive materials will completely secure the Soap Dish to the wall.

Installing the Surface and Corner Mount Soap Dish

- 1) After determining the location of the Soap Dish, clean both the back side of the Soap Dish and the wall panel where it is to be installed.
- 2) Hold the Soap Dish against the wall in the area of installation. Use the torpedo level to make sure the Soap Dish is level. Adjust if necessary ensuring the flat part of the Soap Dish is level.
- 3) Mark along the edges of the Soap Dish with your pencil against the wall. This will give you a reference line to use to ensure the Soap Dish remains level while adhering it to the wall.
- 4) Apply a small bead of silicone to the backside of the Soap Dish towards the outer edges.
- 5) Then apply a small amount of hot melt glue to the center of the backside of the Soap Dish. (Be careful to not place hot melt glue and silicone too close to each other. It is very important to not allow the two adhesives to mix together, as they do not work well when mixed together).
- 6) Once the hot melt glue has been applied, the Soap Dish must be installed IMMEDIATELY. Otherwise the hot melt glue will cool down. (If this happens, simply scrape off the glue and reapply).

- 7) Apply color matching silicone around the entire perimeter of the Soap Dish to seal the Soap Dish to the wall panel.
- 8) Clean any excess silicone and hot melt glue as soon as possible, the earlier you are able to clean it, the easier it is to clean. Also, with a clean rag with acetone, clean any visible pencil lines.

USE ACETONE ONLY! Water based cleaners and other substitutes are not acceptable.
If you do not have acetone, simply use a clean dry rag as another alternative.

Disclaimer Notice: *If the prescribed method of installation is not followed precisely then the Soap Dish may detach from the wall and cause damage to panels and or shower base. If the Soap Dish detaches, physical injury to the occupant of the shower may occur. MPL Company **WILL NOT** be liable for any damages to persons or property due to incorrect installation*

In both cases of installation, the Soap Dish is to remain in place for a minimum of 48 hours to allow the silicone adhesive to cure. Absolutely **NO** weight is to be applied during the first 48 hours as this will weaken the silicone bond. If the Soap Dish is used before the required 48 hours **ALL WARRANTIES WILL BE VOIDED.**

ANY MODIFICATION TO THE SOAP DISH ITSELF WILL VOID THE WARRANTY. THE PARTY MAKING AND / OR AUTHORIZING THE MODIFICATION WILL BE LIABLE FOR **ANY AND ALL DAMAGES.**

If you have any questions or concerns feel free to contact us:

Phone: 317-835-9000

Fax: 317-835-3050

mplcompany.net

PO Box 220 203 North Edgerton Street Fairland, Indiana 46126