



MARLA SHOWER ENCLOSURE INSTALLATION INSTRUCTIONS



2 PEOPLE REQUIRED

Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.



NOTICE


- Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels. An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and metal parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

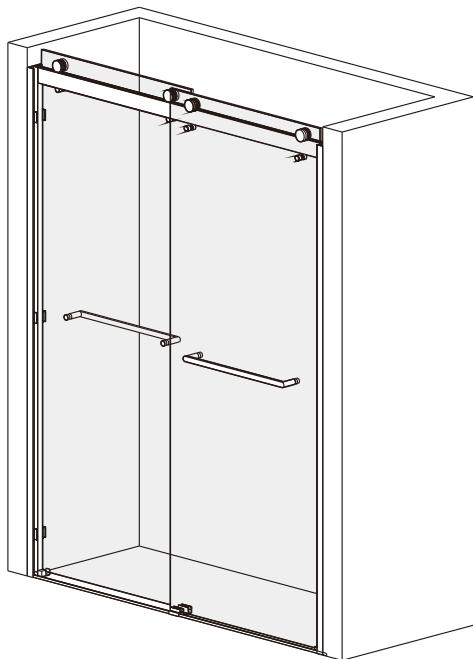
TOOLS REQUIRED

				
SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET

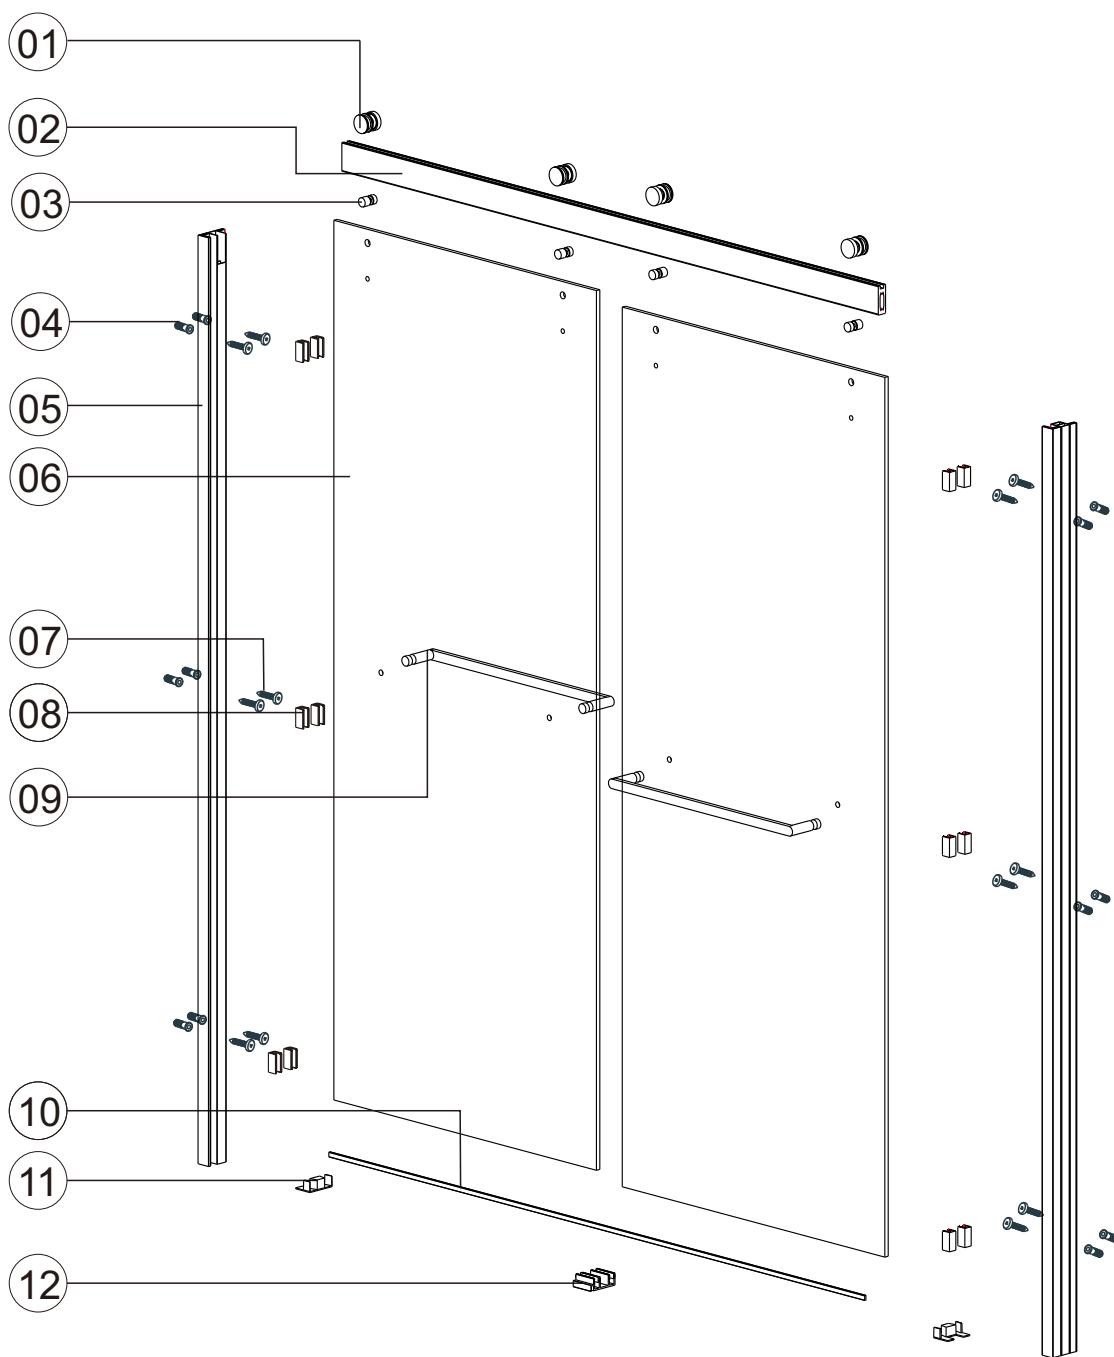
				
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" &1/8") DRILLBITS	HACKSAW	SAFETY GLASSES

*Use a 6mm (1/4") drill bit for ceramic when drilling into ceramic tiles

CHOOSE A CONFIGURATION

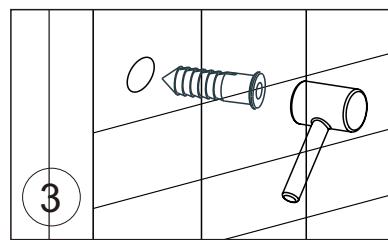
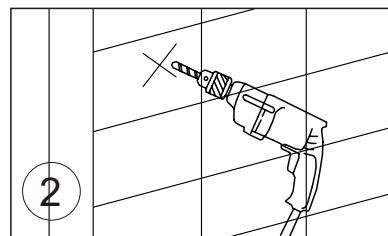
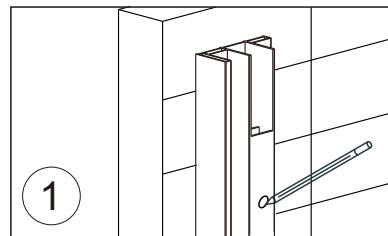
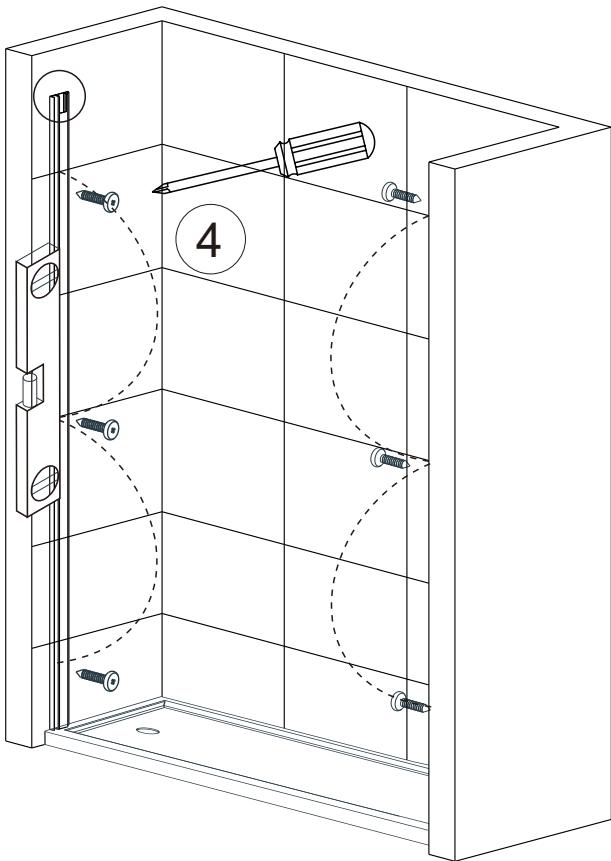
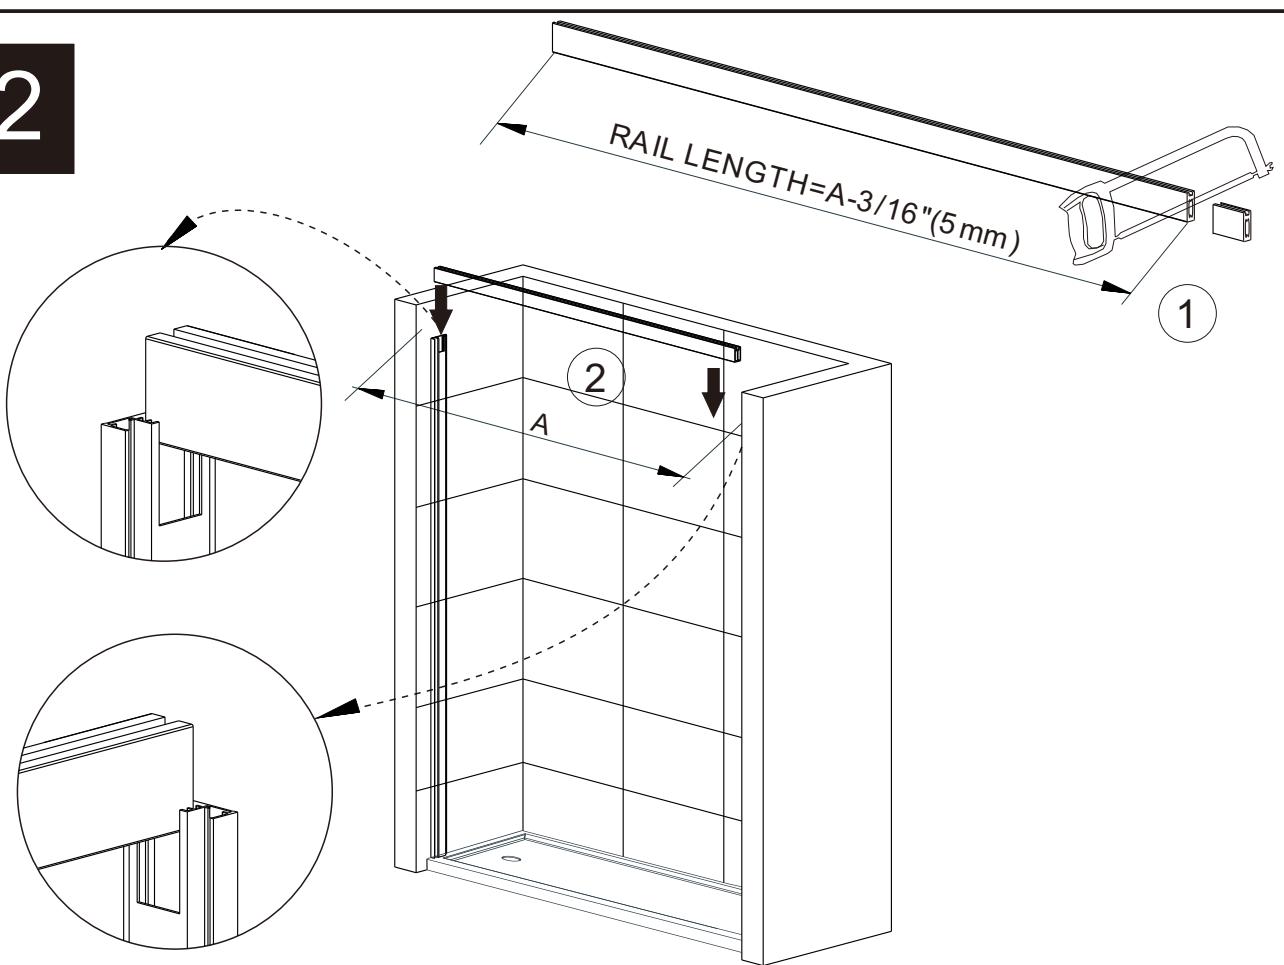


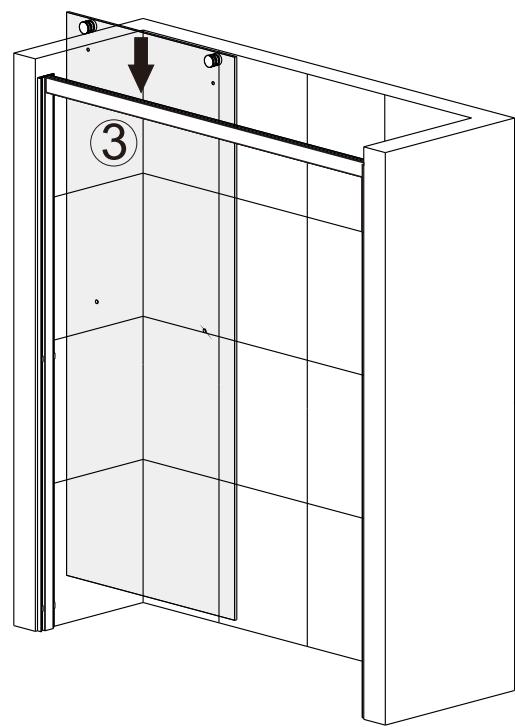
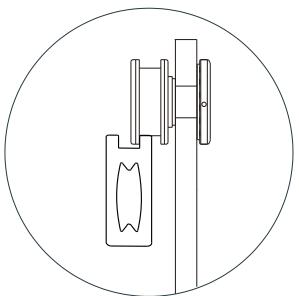
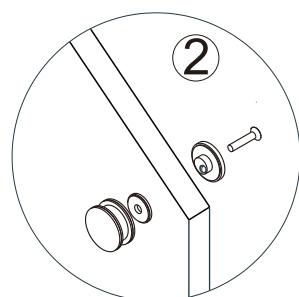
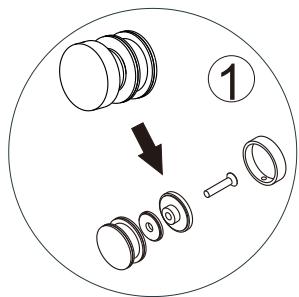
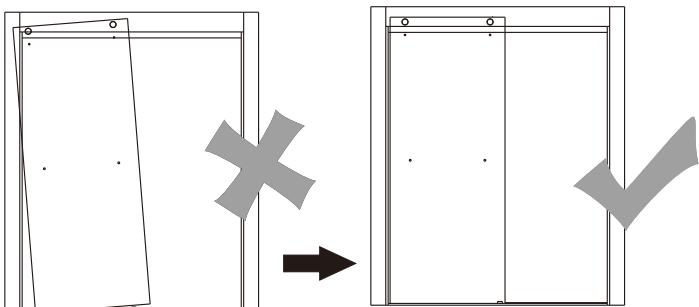
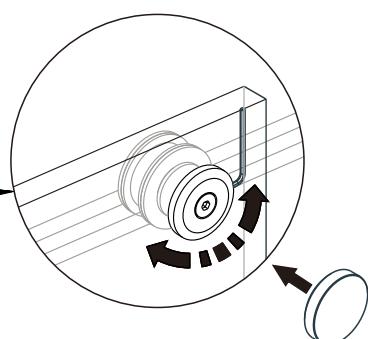
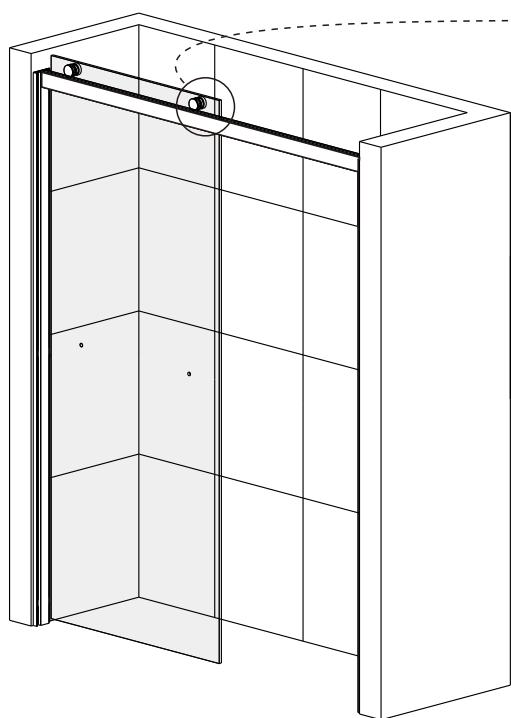
PARTS LISTING

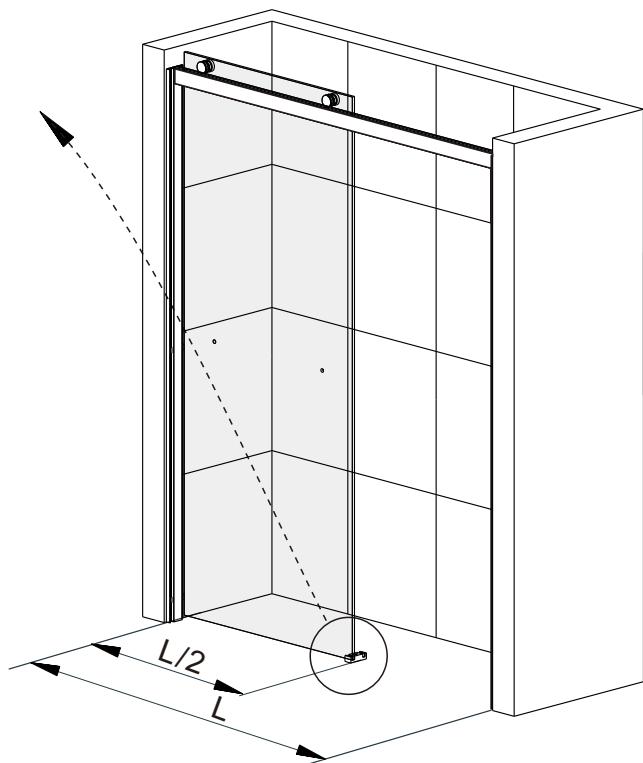
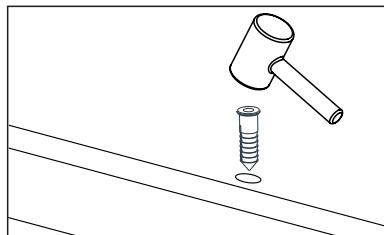
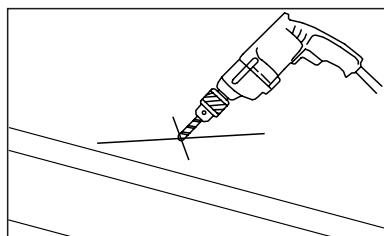
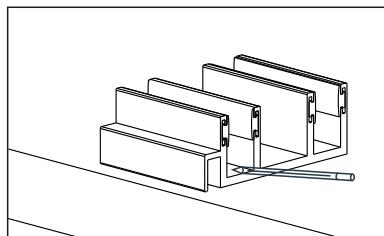
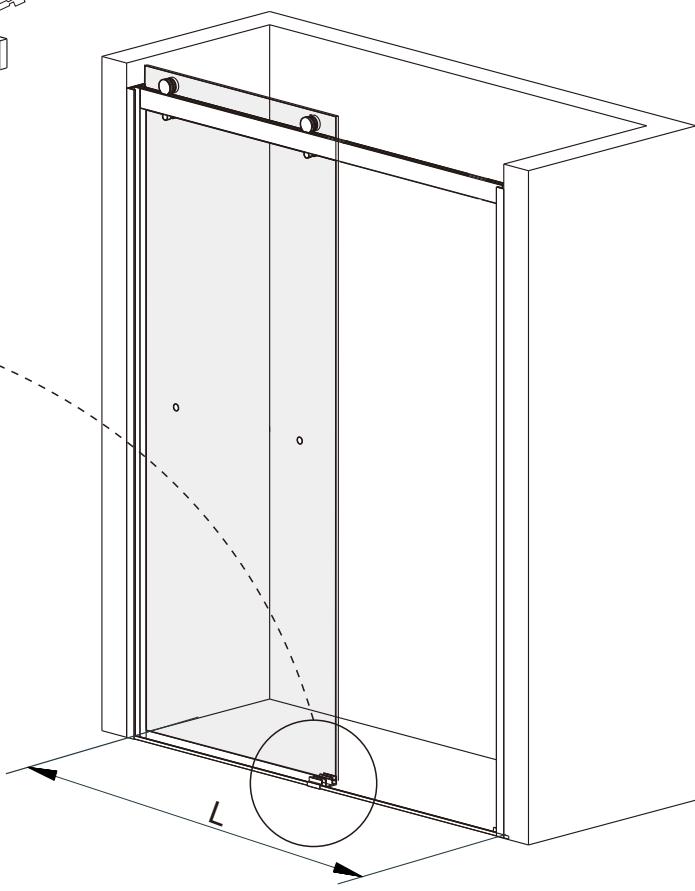
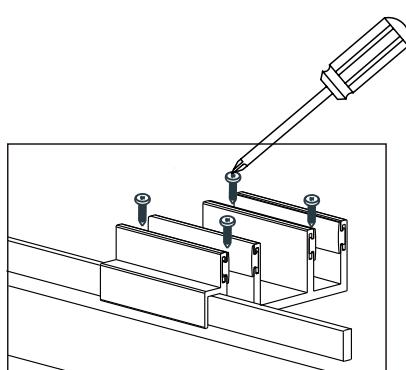
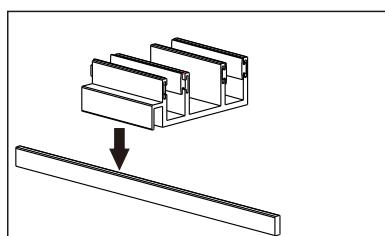
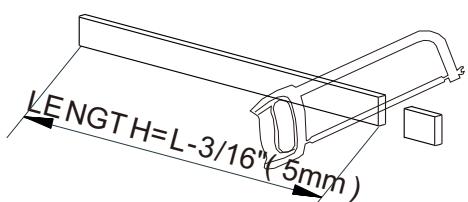


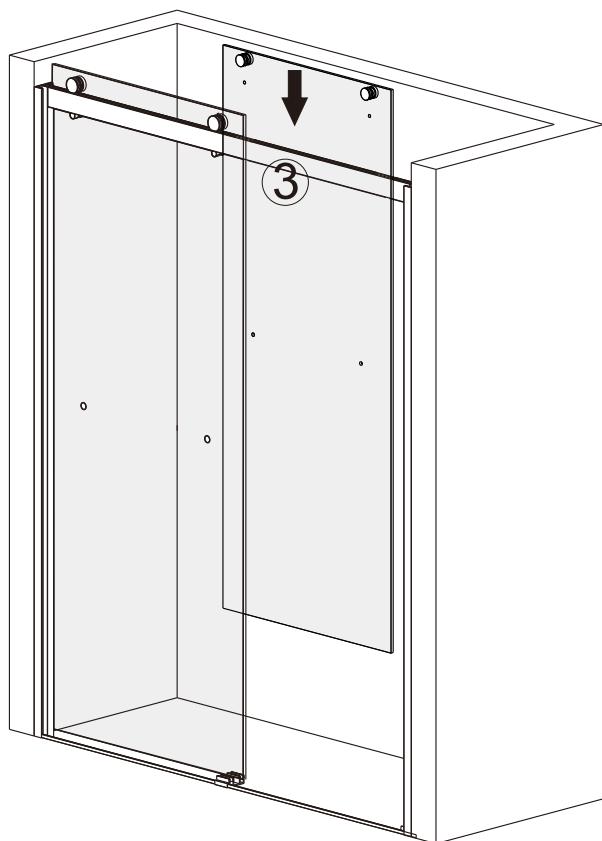
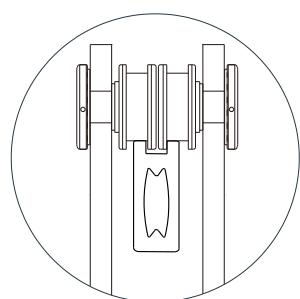
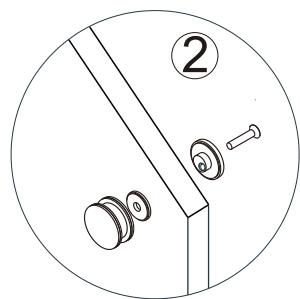
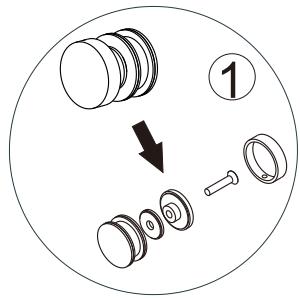
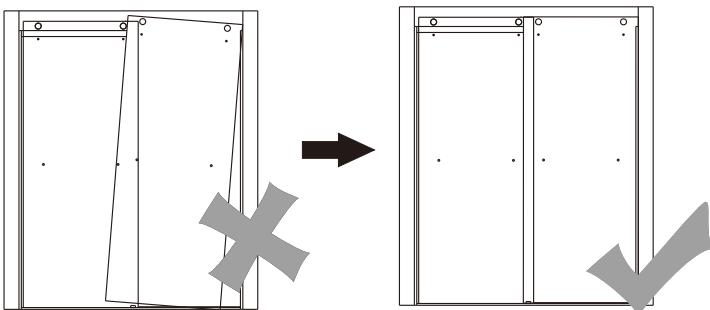
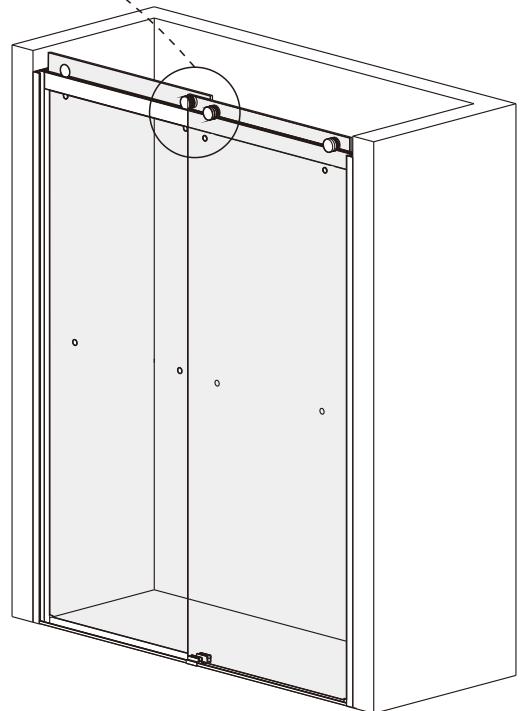
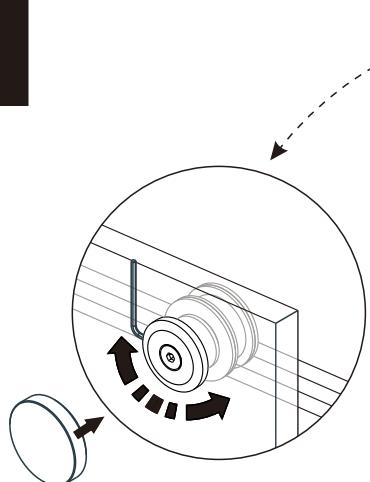
ITEM	PARTS	DIAGRAM	QTY
1	Roller		4
2	Rail		1
3	Anti jumping knob		4
4	Wall plugs Ø6		12
5	Wall profile		2
6	Sliding door		2

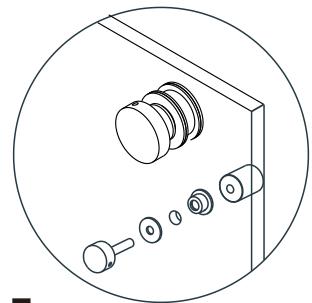
ITEM	PARTS	DIAGRAM	QTY
07	Screw St4x30		12
08	Anti Collision Block		12
09	Towel bar		2
10	Anti-splash threshold		1
11	Side Wall Guard		2
12	Floor guide		1

1**2**

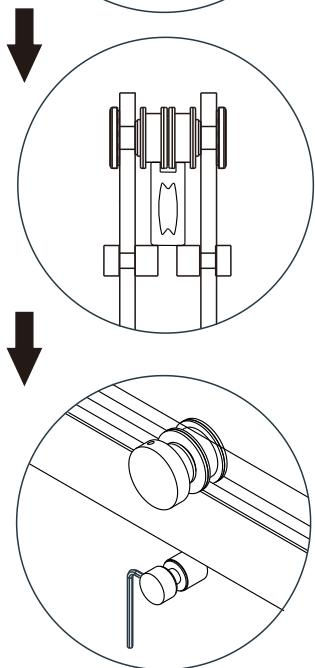
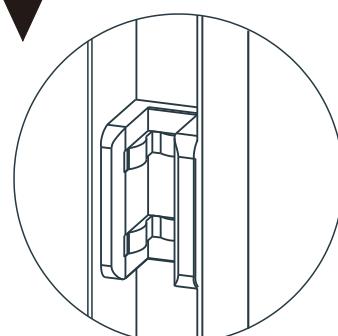
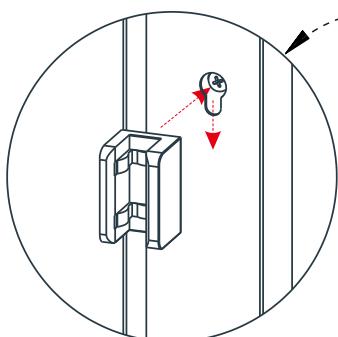
3**4**

5**6**

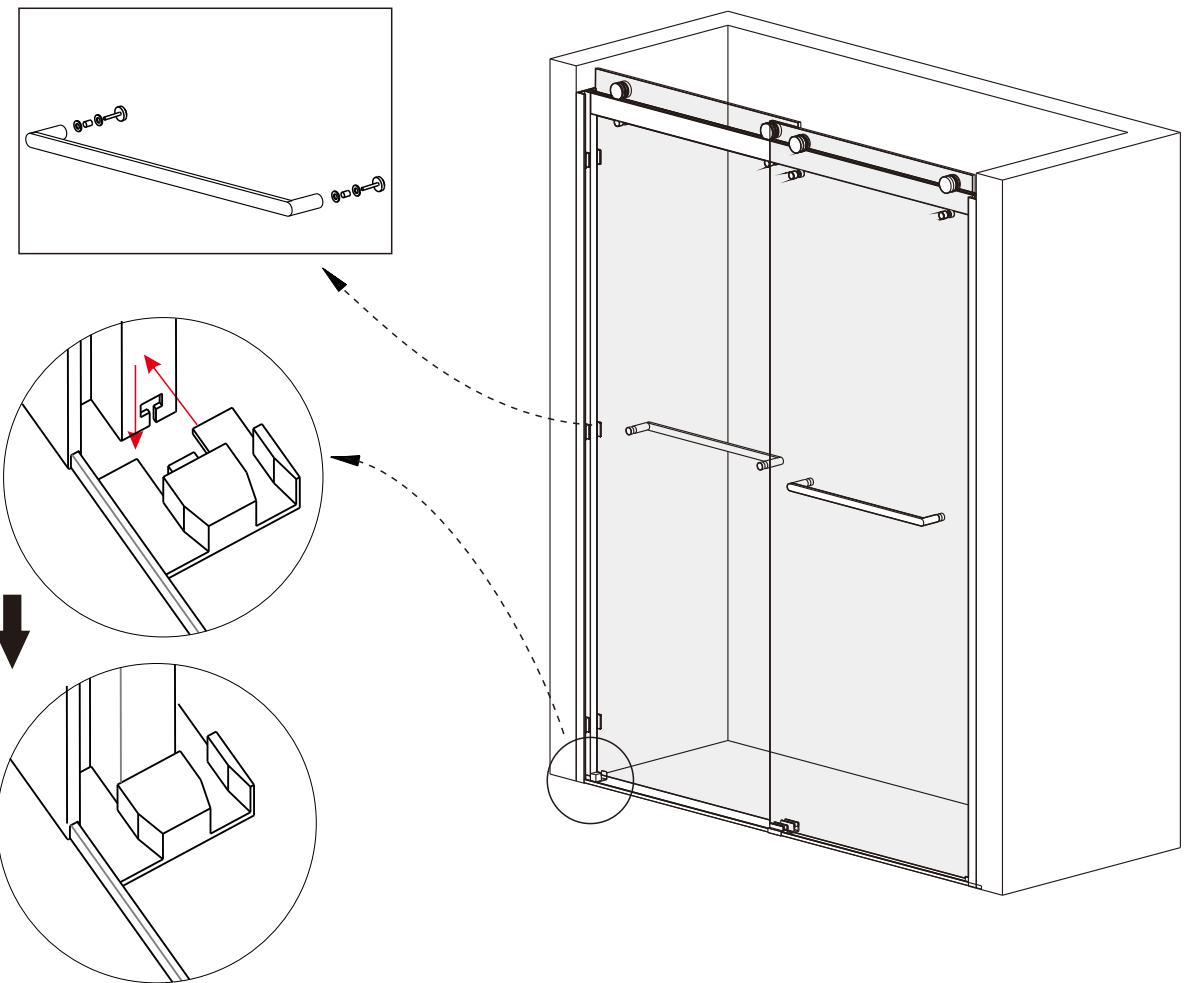
7**8**

9

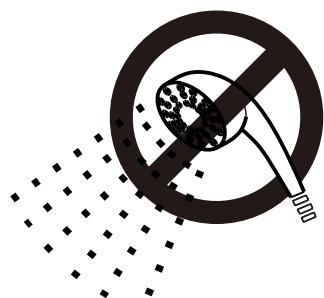
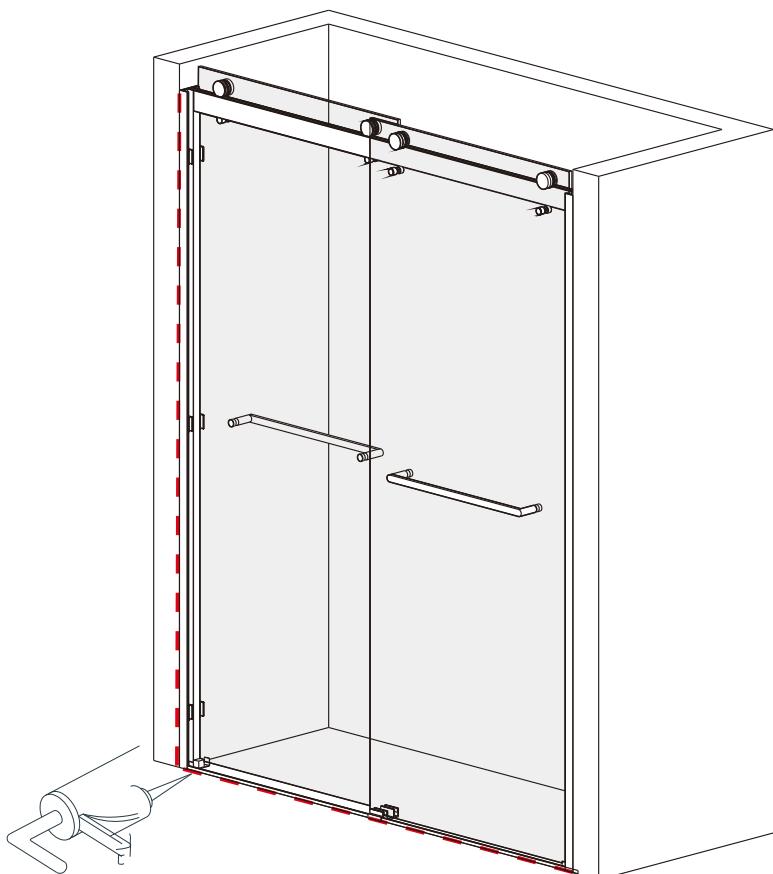
The anti jumping knot must be secured by the Allen key

**10**

11



12



24 HOURS